


Wiring Diagram MG YT EXU Supplement

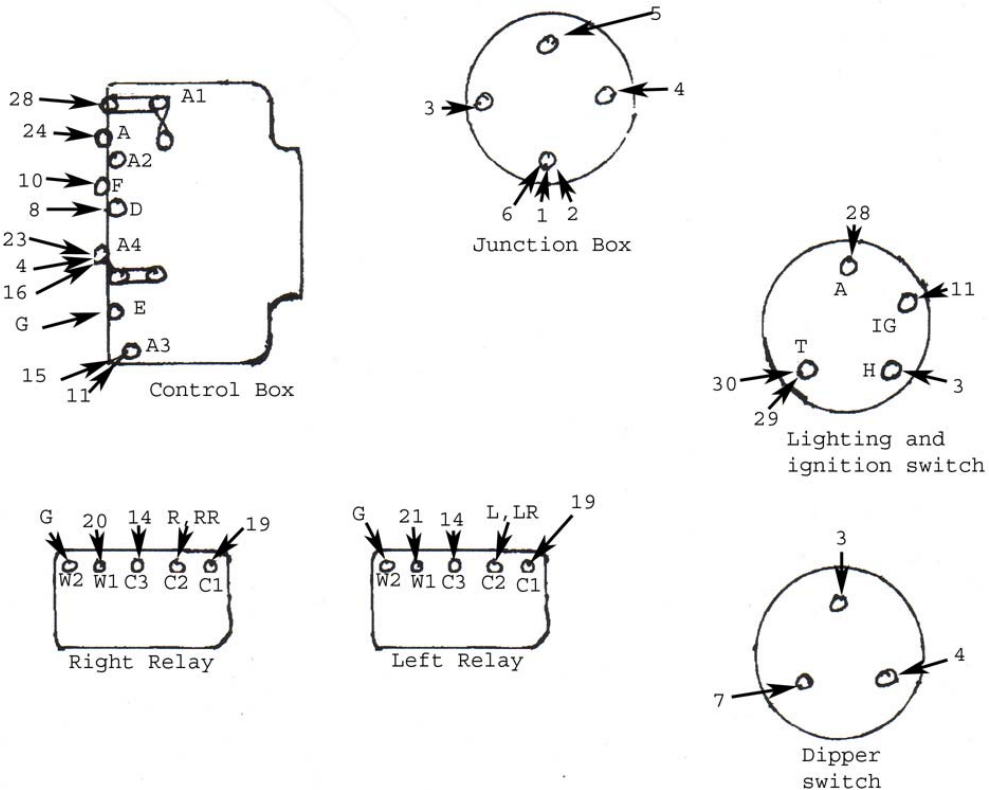

- 1 T on lighting and ignition switch to junction box to park lights.
- 2 T on lighting and ignition switch to junction box to tail lights and number plate light.
- 3 H on lighting and ignition switch to dipper switch.
- 4 Junction box to dipper switch to snap connector for main filament at headlights, also beam indicator bulb at dash.
- 5 Petrol gauge to junction box to petrol tank.
- 6 Junction box to reversing switch.
- 7 Dipper switch to dip filament at headlights.
- 8 D on generator / dynamo to D on fuse and control box, also to ignition warning light.
- 10 F on generator / dynamo to F on fuse and control box.
- 11 A3 on fuse and control box to coil to IG on lighting and ignition switch.
- 14 Stop light switch to C3 on left headlight relay to right headlight relay.
- 15 A3 on fuse and control box to petrol pump.
- 16 A4 on fuse and control box to X on flasher.
- 19 C1 on right and left relay box to L on flasher.
- 20 Right relay box to snap connector for horn push and indicator switch.
- 21 Left relay box to snap connector for horn push and indicator switch.
- 23 A4 on fuse and control box to petrol gauge.
- 24 A on fuse and control box to A on ammeter.
- 28 A on lighting and ignition switch to A1 on fuse and control box.
- 29 T on light switch to junction box.
- 30 T on light switch to panel and dash light switch.
- G All ground wires.
- L Left turn to C2 on left relay box.
- R Right turn to C2 on right relay box.
- LR Left turn, rear to C2 on left relay box.
- RR Right turn, rear to C2 on right relay box.