



ELECTRICAL EQUIPMENT

Fuses

Fuse connecting 'A1' and 'A2'. This fuse protects the accessories which are connected so that they operate irrespective of whether the ignition is on or off.

Fuse connecting 'A3' and 'A4'. This fuse protects the accessories which are connected so that they operate only when the ignition is switched on.

The fuses are carried in the separate fuse block mounted on the bulkhead

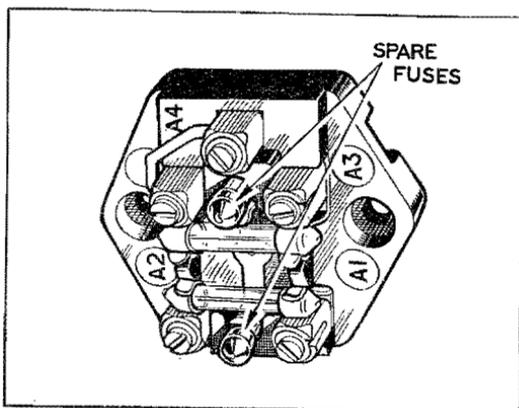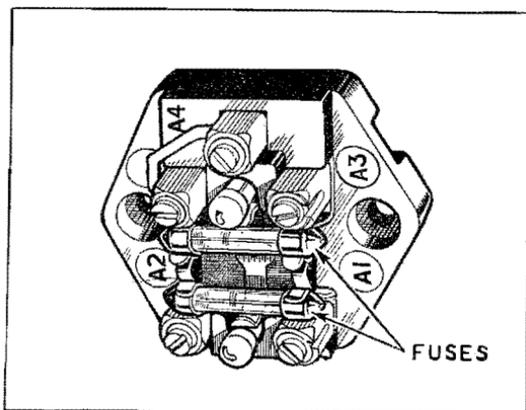

Two spare fuses are housed in holders on the fuse box

Spare fuses

Spare fuses are provided and it is important that only the correct 35-amp. fuses are used for replacement purposes.

The fuse value is marked on a paper slip inside the glass tube of the fuse. If the new fuse blows immediately and the cause of the trouble cannot be found, have the equipment examined at a Lucas Service Depot.

Voltage regulator

The cut-out and regulator are accurately set before leaving the Works and they must not be tampered with. The cover protecting them is therefore sealed. The fuses are carried in a separate fusebox and are accessible without removing the cover protecting the regulator and cut-out units.