


FLOOR JACK PAD: MG T-SERIES



PRINT "ACTUAL SIZE" "100%"

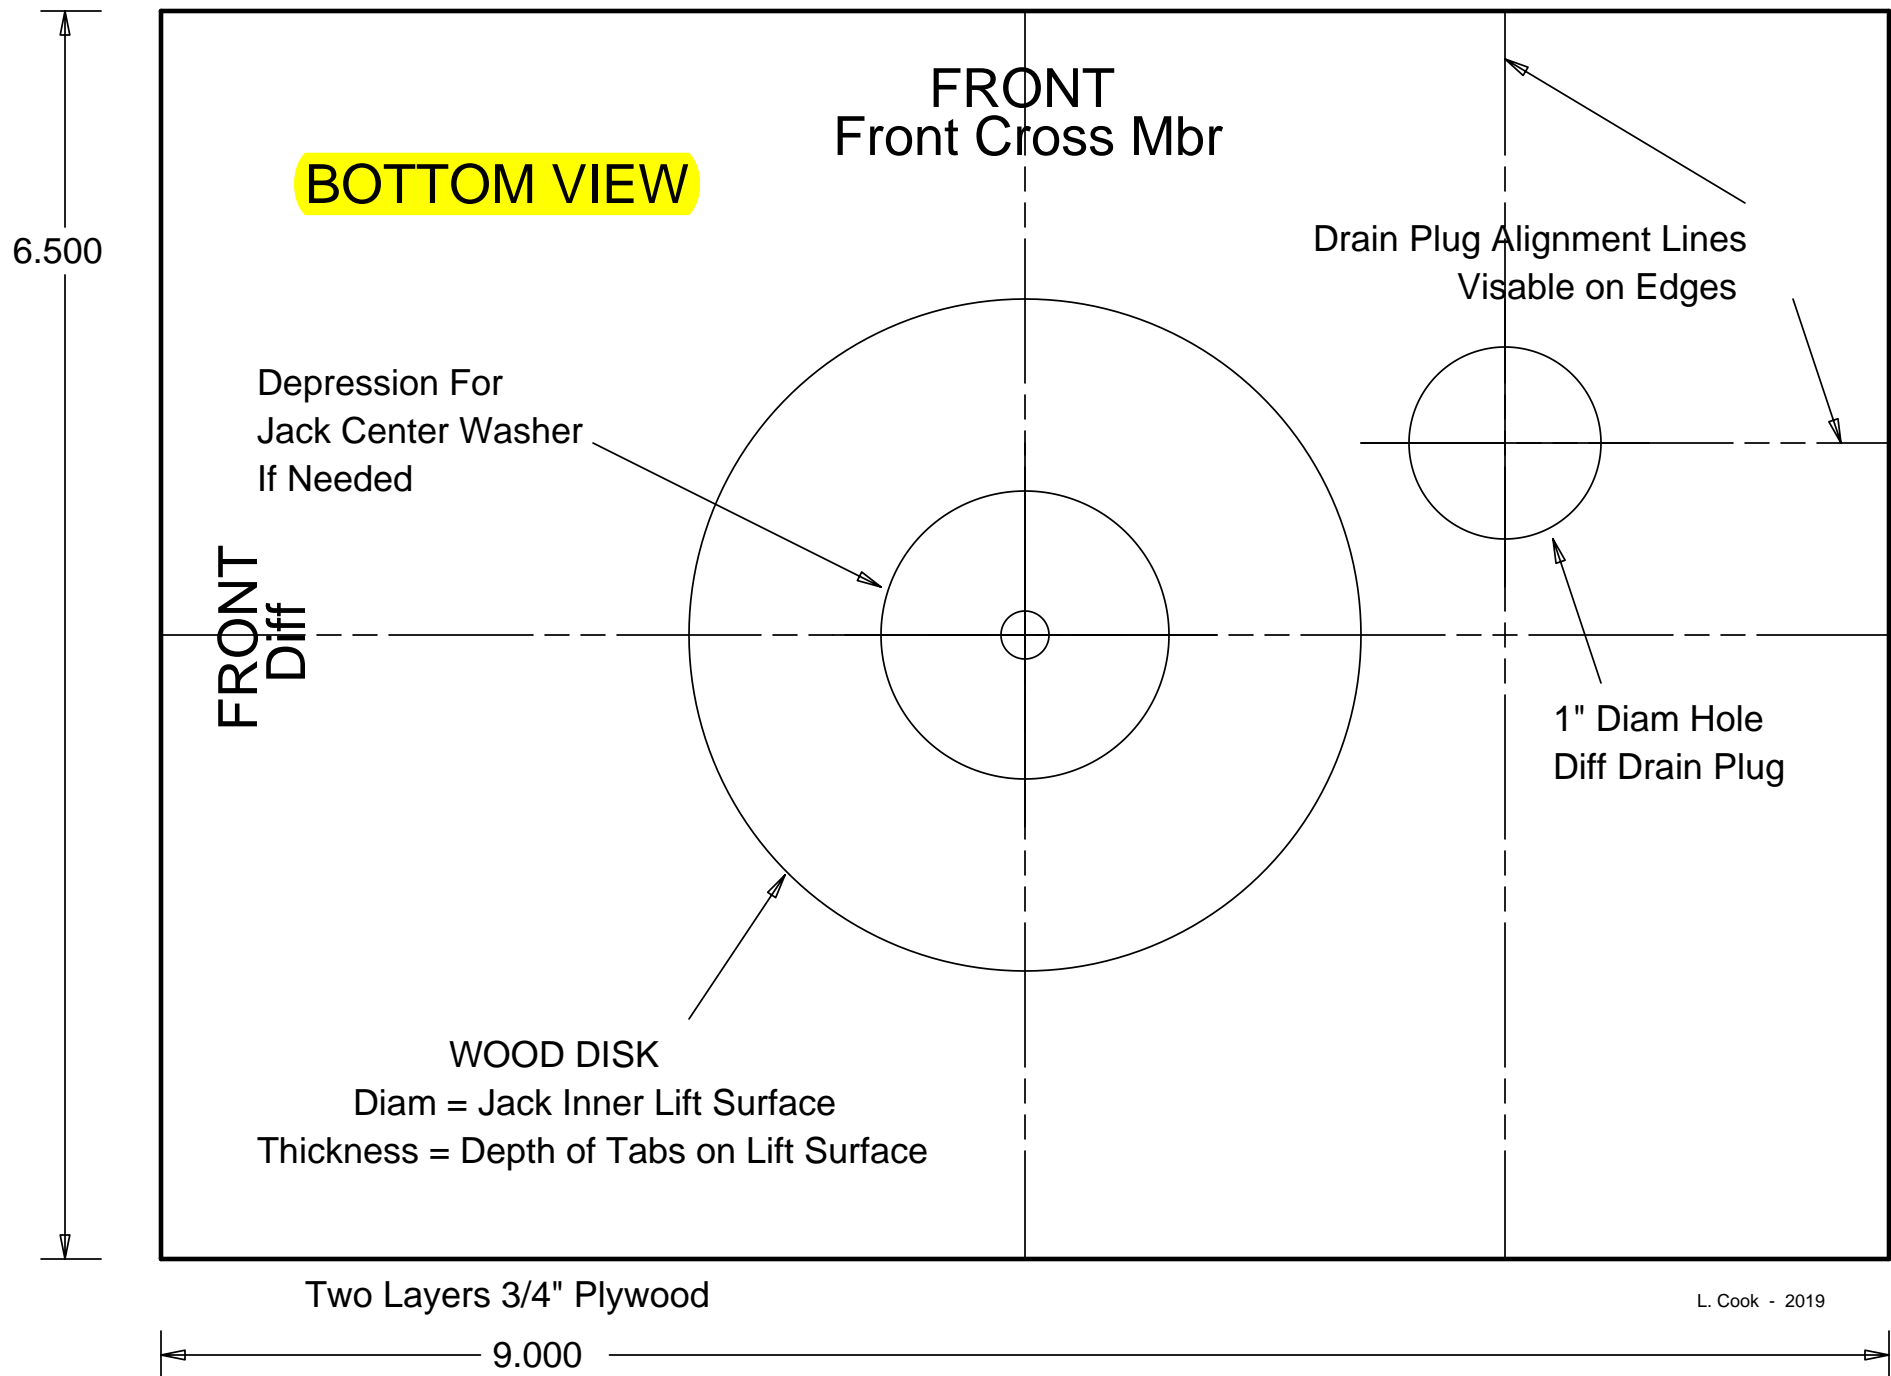


BOTTOM

- Disk on bottom of pad sits inside the cup of the floor jack to keep the pad from moving.
- Size the diameter and depth of disk for brand of jack.
- Relieve center of disk to clear washer in cup if necessary.
- Glue to center of pad.



TOP

- One-inch hole protects diff drain plug from damage by jack.
- Optional carpet on top of pad protects paint on diff and front cross member.
- Affixed with carpet tape or contact cement.

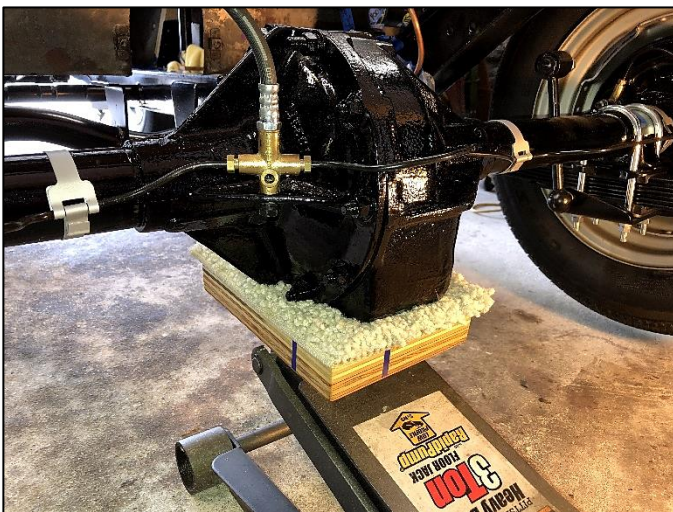

LIFTING @ DIFF

- Pad parallel to jack.
- Marks on sides of pad help position the hole in pad under the gear oil drain plug.
- Pad and jack cup under center of diff.



LIFTING @ FRONT CROSS MEMBER

- Pad perpendicular to jack.
- Pad and jack cup under center of front cross member (left & right / fore & aft).
- Photos of bare MGTF chassis.